

Hot water heat boiler

Boiler shown under normal firing conditions. If Lockout light is on and water flow is off then water pump or line has a blockage. If Lockout is on and water flow/blower/call for heat are on, then open plastic cover and press “flame reset”.



Upper digits on display are outlet temperature (normal :125-165)

Lower digits are inlet temperature (normal :125-137)

